

SPURS GEOMETRY OF THE DOWEL DRILLS:

Negative spurs and center point ART. L101 ÷ L110

STANDARD

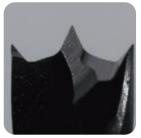

ront

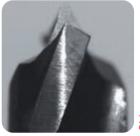


- Good finish and tool life

- Lower price

Rounded spurs and center point ART. L112 ÷ L113

EXTRA FINE

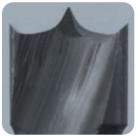

Front



Side

- HW more resistant to wear
- Better finish
- Longer tool life



Rounded spurs and reinforced center point ART. L114 ÷ L117

EXTRA TIME



Front



Side

- HW more resistant to wear
- Excellent finish
- Longer tool life
- Easier to resharpen
- Excellent performance in any working conditions
- Best price/quality ratio

Images taken with PRE SET LEADER